



Job Name: _____

Type: _____

Part #: _____

Notes: _____

LSXLRN INDOOR | DAMP

SPECIFICATIONS: INTERNAL

AC ONLY: Standard configuration with high output, high efficiency red LED technology, 120/277V input. **SELF POWERED:** Standard configuration with high output, high efficiency red or green LED technology, 120/277V input. Nickel-cadmium battery provides a minimum 90 minutes emergency duration. 24 hour recharge after 90 minute discharge. Low voltage battery disconnect.

SPECIFICATIONS: EXTERNAL

The LSXLRN features an integrated and unique pivot system that allows it to be installed on the wall, ceiling or sloped surface. Available with a backbox for recess mount. Interchangeable acrylic panels easily and securely snap into the housing, reducing the possible damage that can occur during normal installations.

SPECIFICATIONS: ELECTRICAL

BATTERY: The LSXLRN is designed with a 3.6V 900mAH maintenance free sealed nickel cadmium battery that provides minimum emergency duration of 90 minutes. The recharge time of the battery is 24 hours.

CIRCUIT: The LSXLRN has a 120/277V solid state transformer. Low voltage disconnect and brownout protection are standard. Red or green LEDs totaling <2W.

SELF POWERED

The LSXLRN self-powered is designed to operate on battery power in the event of regular / mains power failure. Both the battery and charger are completely contained within the standard sign. There are no external components and no alteration made to the external dimensions of the standard sign. Status is easily determined via an LED that indicates ACON. A push button test switch allows maintenance personnel to quickly confirm the operational status of the exit at any time.

WARRANTY

The LSXLRN comes with a 5-year factory warranty. Deliberate damage, misuse, improper installation effectively void the warranty. For complete warranty details see online.




A: 7.75"/196.85mm




SPECIFICATIONS: MECHANICAL

The recessed back box has a steel housing and trimplate with anodized aluminum finish. Adjustable bar hangers adapt housing for mounting on a suspended ceiling. The recessed back box with color matched trimplate effortlessly converts the standard surface mount curva to recess mount.

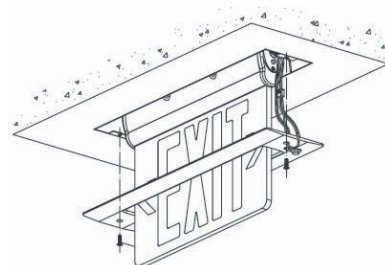

DIMENSIONS

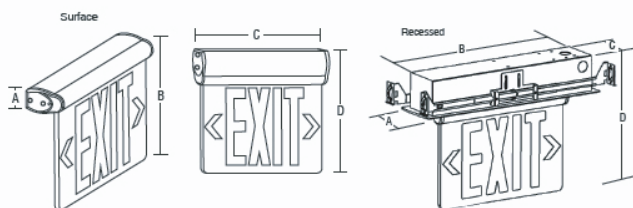

	A	B	C	D
Recessed	5 1/2"	14 9/16"	3 1/8"	11 1/8"
Surface	1 5/8"	8 1/2"	12 1/8"	9 3/4"

ORDERING INFORMATION

Sample Part Number: **LSXLRN-SA-LR-1-C-AL-AT**

SERIES	MODEL	LED COLOR	# FACES	PANEL COLOR	MOUNTING	HOUSING	OPTIONS
LSXLRN	HT (AC ONLY) SA ¹ (SELF-POWERED)	LR (RED) LG (GREEN)	1 (SINGLE) 2 (DOUBLE)	C (clear) M (mirror) W (white)	S (SURFACE)	AL (ALUMINUM) W (WHITE)	RKW-HT (recessed kit white, AC only) RKBAL-HT (recessed kit brushed aluminum, AC only) RKW-SA (recessed kit white AC & EM) RKBAL-SA (recessed kit brushed aluminum, AC & EM)

NOTES
1: AT standard on all SA models.
2: Clear available single face only.



Job Name: _____

Type: _____

Part #: _____

Notes: _____

AUTOTEST

The LSXLRN SA version comes standard with the Autotest diagnostic system. Featuring continuous monitoring of the units main components (battery, charger, transformer, lamps & LED's) and pro-viding instant visual verification of the status.

AUTO-TEST FEATURES:

- Monitor battery disconnection, charger failure, lamp failure, LED failure and transformer fault every 5 seconds without discharging the battery.
- Automatically indicates lamp, battery and charger status by dual-color LED lamp.
- Factory preset Autotest does not need to be field adjusted

AUTO-TEST FUNCTIONS:

- Verifies battery disconnect, charger board failure, lamp failure, LED failure and transformer failure every 5 seconds.
- One (1) minute Autotest every month.
- Thirty (30) minute Autotest every six (6) months.
- Ninety (90) minute Autotest every twelve (12) months.

Autotest VISUAL ALERT

- (1) blink red LED = Battery not connected
- (2) blinks red LED = Battery shorted and/or Battery voltage drop
- (3) blinks red LED = Charger board fault
- (4) blinks red LED = Transformer fault
- (5) blinks red LED = Emergency lamp fault
- (6) blinks red LED = Remote lamp fault
- (7) blinks red LED = LED lamp fault

Autotest MANUAL FUNCTIONS:

Press test button 1x (within 2 sec.) = 1 minute test
Press test button 2x (within 2 sec.) = 5 minute test
Press test button 3x (within 2 sec.) = 30 minute test
Press test button 4x (within 2 sec.) = 90 minute test